



## Texas T Parts

711 Ashford Hills Drive  
Bryan, Texas 77801

(979) 260-5433 1-800-337-6977  
Fax (979) 260-1214  
www.TexasTParts.com



### Drive Shaft Front Roller Bearing and Seal Kit Installation Instructions - Item # T2581

1. Remove the old bushing and clean the drive shaft housing thoroughly.
2. Press the seal into the housing about 1/2" with lip towards the engine.
3. Align the grease hole in the bearing with the grease fitting hole in the drive shaft housing and carefully press the bearing (rounded end first) into the housing using a 1" bolt or other suitable driver. Do not attempt to press the bearing without a suitable drive as it will distort the bearing. Check the alignment of the grease hole with the grease fitting on the torque tube to make sure that you will be able to grease the assembly.
4. Pack the roller bearing with grease before installing the drive shaft.

If you like our product, tell your friends. If you have a question or a problem, let us know.

Thanks, and Smooth Running,

TEXAS 'T' PARTS